

## SimPal-G4

SMS Command	Function	Default
#00#	Set Master number	
#14#13860000#	Change Master number	
#07#number# #07#email#	Add users and email.	
#27#1386000000#	Delete family number	
#27#	Delete all family number	
#01#	Arm camera	Default Disarm
#02#	Disarm camera	
#10#	Check status	
#40#	Check FW, IMEI, signal	
#03#	Get MMS	
#04#1#	Schedule ARM camera	Default OFF
#05#	Get images to email	
#06#1#	Schedule get images	Default OFF
#08#1#sensor#	Add normal sensor	
#08#2#sensor#	Add emergency sensor	
#08#	Check sensor	
#28#	Deleted all sensor	
#28#sensor#	Deleted sensor	
#29#	Deleted Remote controller	
#09#email#	Add email	
#09#	Delete email	
#11#1#	SMS alert - ON	Default SMS ON
#11#0#	SMS alert - OFF	
#12#0#	Images alert - OFF	
#12#1#	Images alert by MMS	Default alert by MMS
#12#2#	Images alert by email	
#13#0#	Calling alert - OFF	Default calling OFF
#13#1#	Calling alert - ON	
#41#0#0700#2100#	Set schedule ARM	Default Schedule alarm OFF Default Day: Daily Default Time: 17:00-09:00

#43#1#0#0700#2100#10#	Set schedule get images	Default Schedule images OFF Default model: MMS Default date: Daily Default time: 08:00-18:00 Default interval: 10 minutes
#15#	Check temperature	
#15#0#	Temperature alert - OFF	Default OFF
#15#1#	Temperature alert - ON	
#16#A#B#	Set temperature range	Default range: 20-30
#32#0#	SMS alert to Users - OFF	Default OFF
#32#1#	SMS alert to Users - ON	
#33#0#	Images alert to users - OFF	Default OFF
#33#1#	Images alert to users - ON	
#17#0#	PIR motion detection - OFF	
#17#1#	PIR motion detection - ON	Default ON
#18#old password#new password#	Change password	Default 1234
#19#Password#	Reset factory setting	
#20#0#	Night vision LED - OFF	
#20#1#	Night vision LED - Auto mode	Default AUTO
#20#2#	Night vision LED - constant ON	
#21#5#	Set alert images qty	Default 3 images
#22#2#	Set alert images size	Default 1280*768 (big size)
#24#APN#Username#Password#MCC#MNC#proxy#port#1#	Set Cellular data settings	Auto configure according SIM card MCC+MNC
#24#	Read cellular data settings	
#25#mmsc#IP#wap-Port#http-port#APN#user#Password#	Set MMS settings	Auto configure according SIM card MCC+MNC
#25#	Read MMS settings	
#26#email#password#STMP#SMTP port#type#tls#	Outbound email account settings	Default production testing email account. 2905375435@qq.com
#26#	Read ourbound email settings	
#30#0#	Beeper alert - OFF	Default OFF
#30#1#	Beeper alert - ON	
#31#1#	LED status indicator- OFF	Default ON
#31#1#	LED status indicator- ON	

#34#0#	SMS notification at remote control operation - OFF	Default OFF
#34#1#	SMS notification at remote control operation - ON	
#35#0#	Power failure SMS alert - OFF	
#35#1#	Power failure SMS alert - ON	Default ON
#36#1#	Language setting	
#37#0#	Weak signal SMS alert - OFF	Default OFF
#37#1#	Weak signal SMS alert - ON	
#54#	Manual configure APN & MMS from list.	
#54#name#	Manual select APN & MMS from list.	